

ESI, Inc.
Prager Shell® Kit B Removal Instructions


Step 1: Unscrew Luer barrel connector



Step 2: Slide barrel rearward. Turn barrel and remove Luer shaft from shell.



**Step 3: Removal Error.
Barrel moved past gear system.**

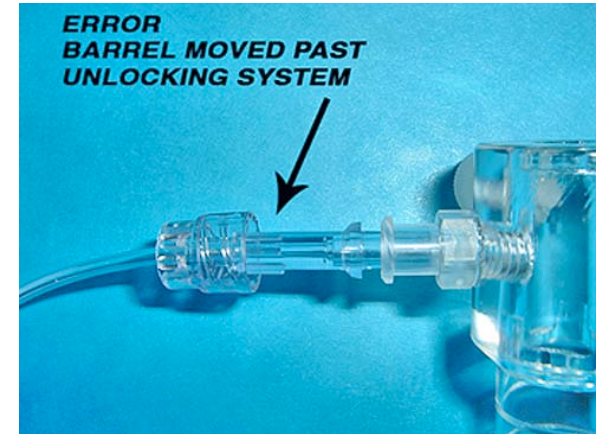

Note: Gear teeth on Luer shaft must be located inside barrel housing to engage teeth before turning barrel counter-clockwise and removing tubing.